


**KitchenAid®**

**30" INDUCTION DOUBLE OVEN CONVECTION RANGE**

**MODELS:**

KFID500ESS02 (Stainless)


# COOKTOP PARTS

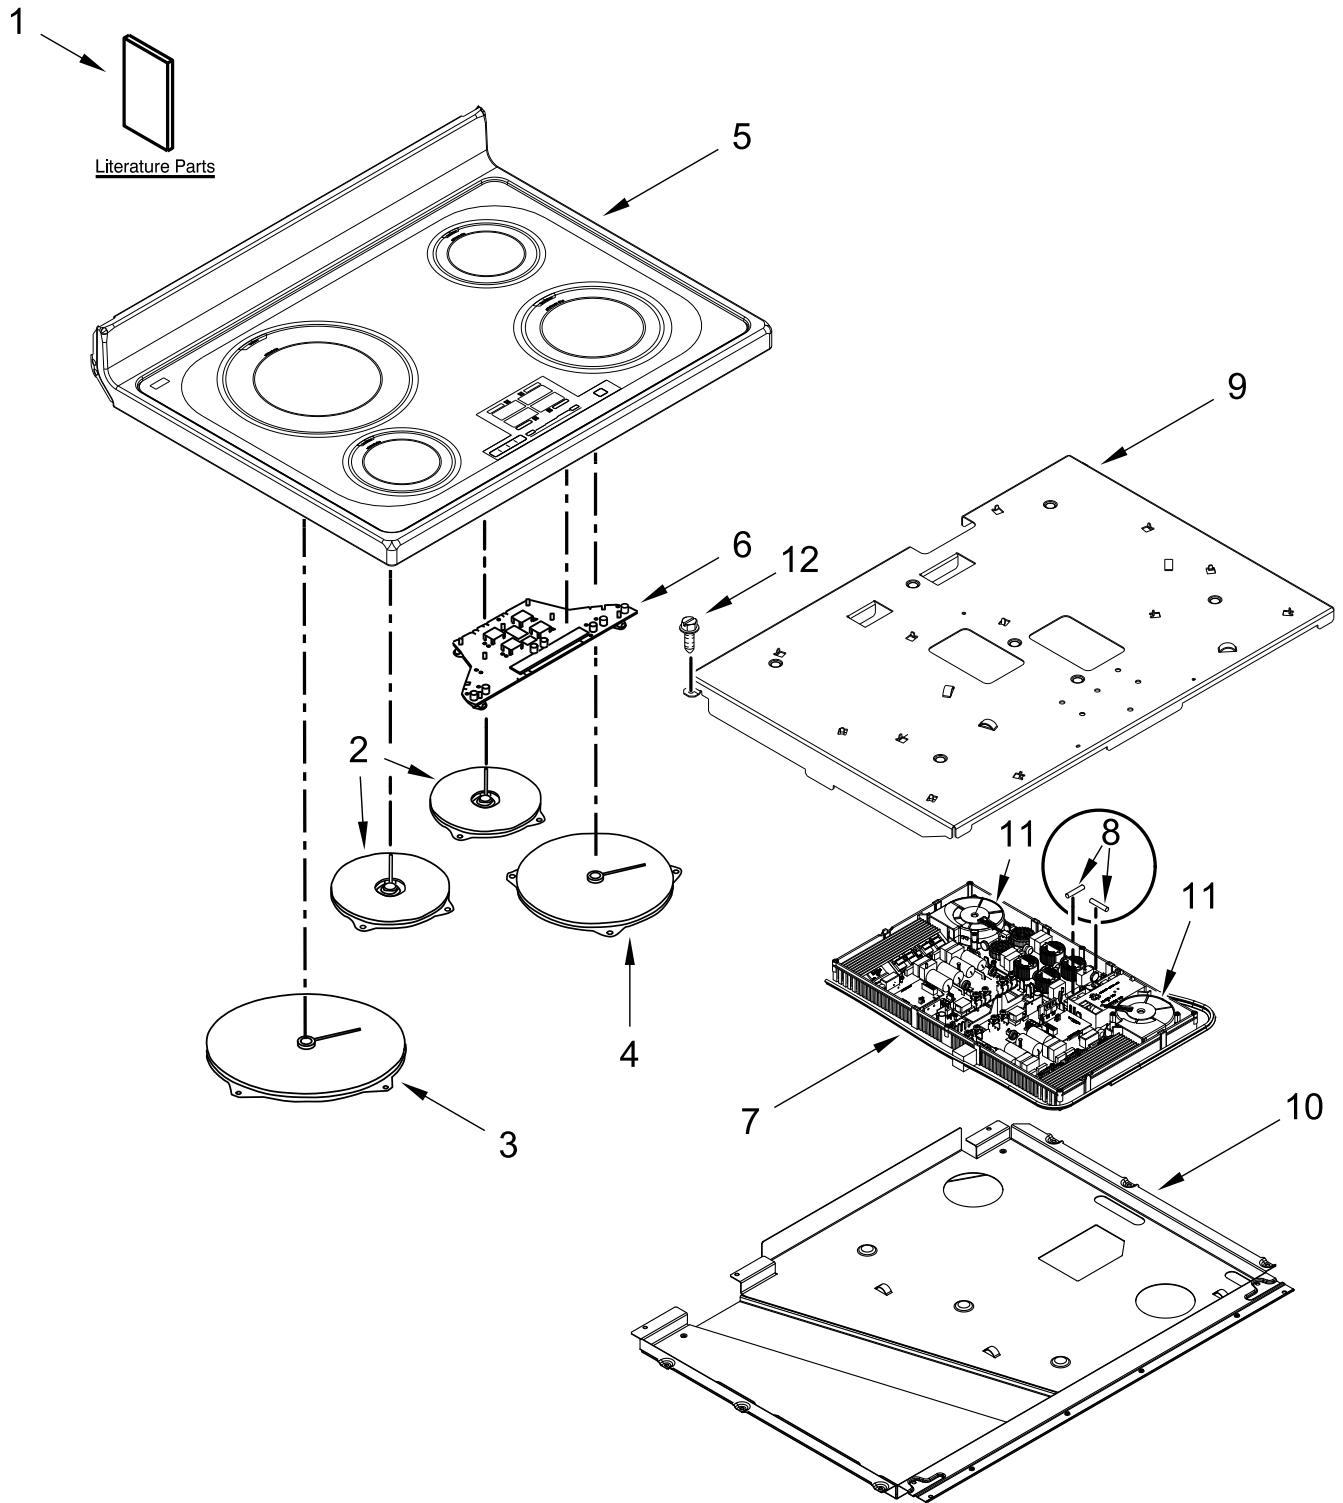

# COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	4	W10536262	Hotplate (Right Front)	12	4450800	Screw, Grounding
	W10694057	Guide, Use & Care	5		Cooktop			FOLLOWING PARTS NOT ILLUSTRATED
	W10694066	Instructions, Installation		W10687992	Stainless		W11171882	Harness, Main
	W10647745	Sheet, Tech	6	W10808236	Control, UI		W11172529	Harness, Signal
	9762761	Tips, Safe Cooking (English)	7	W10873518	Assembly, Induction Module		W11172531	Harness, Sensor & Locks
	W10065852	Tips, Safe Cooking (French)	8	W10328492	Fuse		7101P027-60	Screw, Ground
2	W10410580	Hotplate (Left Front & Right Rear)	9	W10454938	Plate, Induction		7401P157-60	Block, Bare Wire Adapter
			10	W10564364	Assembly, Induction Pan		8019P013-60	Clip, Wire Lock
3	W10460400	Hotplate (Left Rear)	11	W10328381	Fan, Cooling (Left)			
				W10328378	Fan, Cooling (Right)			


# CONTROL PANEL PARTS

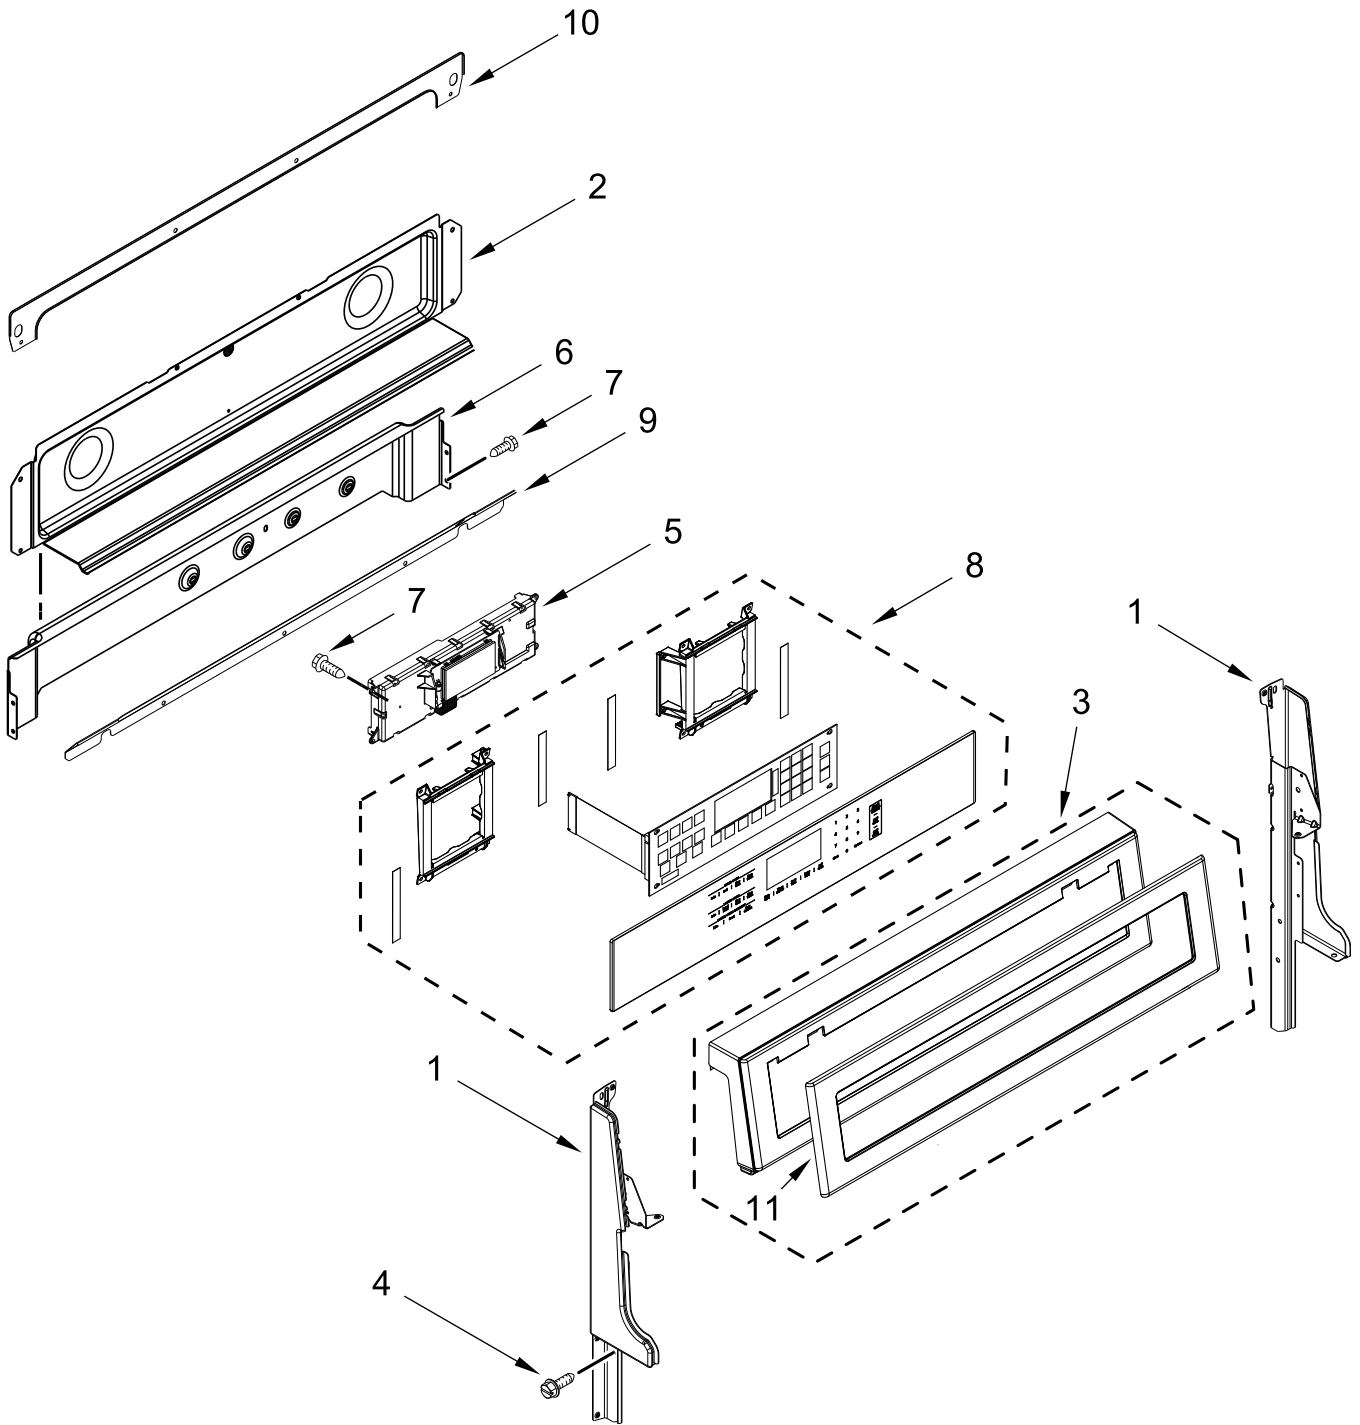

# CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard	4	7101P634-60	Screw	9	W10299338	Shield, Wire Cover
	W10319109	Black (Left)	5	W10648866	Control, Electronic	10	W10292689	Cover, Wire Filler
	W10319111	Black (Right)	6	W10278697	Shield, Vent	11		Skin, Control Panel
2	W10776098	Cover, Backguard	7	9780274	Screw			(Not Serviced)
3		Console	8		Assembly, Overlay			
	W10645854	Stainless		W10776281	Black			


# CHASSIS PARTS

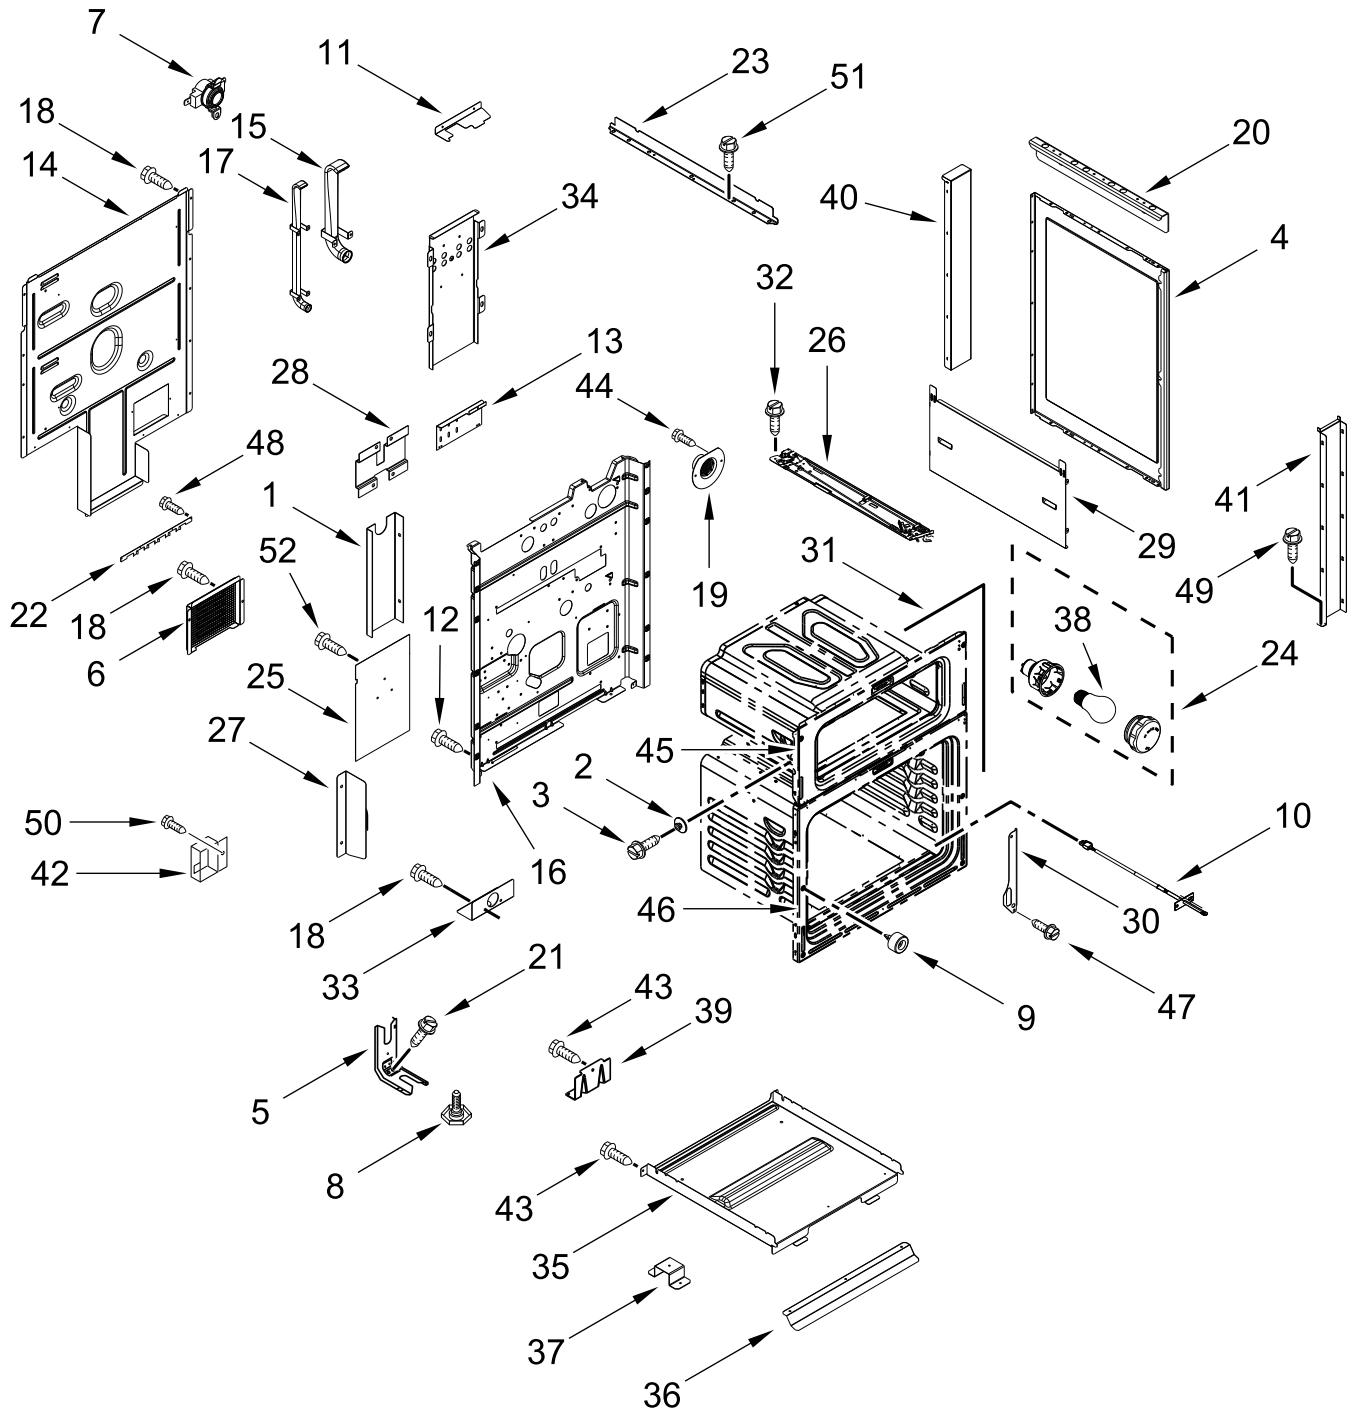

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10332459	Shield, Heat	22	8036P012-60	Shield, Power Cord	40	W10466974	Duct, Side Induction (Back)
2	W10237689	Spacer, Side Panel	23	W10357697	Bracket, Side Panel	41	W10614824	Duct, Side Induction (Front)
3	W10267456	Screw, Shoulder	24	W10454648	Assembly, Light	42	8285593	Cover, Connector
4	W10625873	Black (Left)	25	W10311987	Shield, Cord (Right)	43	7101P426-60	Screw
	W10550799	Black (Right)	26	W10683517	Lock, Rear Mount	44	W10720084	Screw
5	3801F656-51	Bracket, Anti-Tip	27	W10268560	Cover, Wire Lower	45	W10606341	Front, Main (Upper)
6	W10312612	Cover, Access (Terminal Block)	28	7003P104-60	Insulator, Heat Shield	46	W10308654	Front, Main (Lower)
7	7403P899-60	Switch, High Limit	29	W10538516	Shield, Side Insulation	47	4449743	Screw
8	7101P507-60	Foot, Leveler	30	W10410463	Cover, Hinge (Left)	48	489290	Screw
9	W10105790	Bumper & Screw		W10410461	Cover, Hinge (Right)	49	7101P633-60	Screw (Black)
10	7430P044-60	Sensor, Oven	31	W10337392	Gasket, Oven Door (Upper)	50	7101P338-60	Screw
11	W10268559	Cover, Lower Wire		W10269069	Gasket, Oven Door (Lower)	51	7101P635-60	Screw (Black)
12	7101P376-60	Screw				52	7101P500-60	Screw
13	W10332449	Shield, Cord						INSULATION
14	W10261386	Cover, Main Wire	32	7101P375-60	Screw	W10271637		Insulation, Floor
15	W10337391	Tube, Vent (Upper)	33	W10190166	Bracket, Power Supply	W10308393		Insulation, Wrapper
16	W10668730	Back, Main	34	W10261388	Bracket, Terminal	W10322111		Insulation, Back
17	W10323793	Tube, Vent (Lower)	35	W10548601	Pan, Element	W10204079		Insulation, Middle
18	7101P434-60	Screw	36	W10253470	Bracket, Retaining	W10204085		Insulation, Main Front Strip
19	W10322408	Adapter, Vent Tube	37	W10260545	Clip, Retaining	W10272326		Insulation, Hidden Bake Pouch
20	W10319087	Bracket, U Channel	38	7407P103-60	Bulb, Light			
21	7101P485-60	Screw, Anti-Tip Kit	39	W10863342	Support, Lower Oven			

# INTERNAL OVEN PARTS

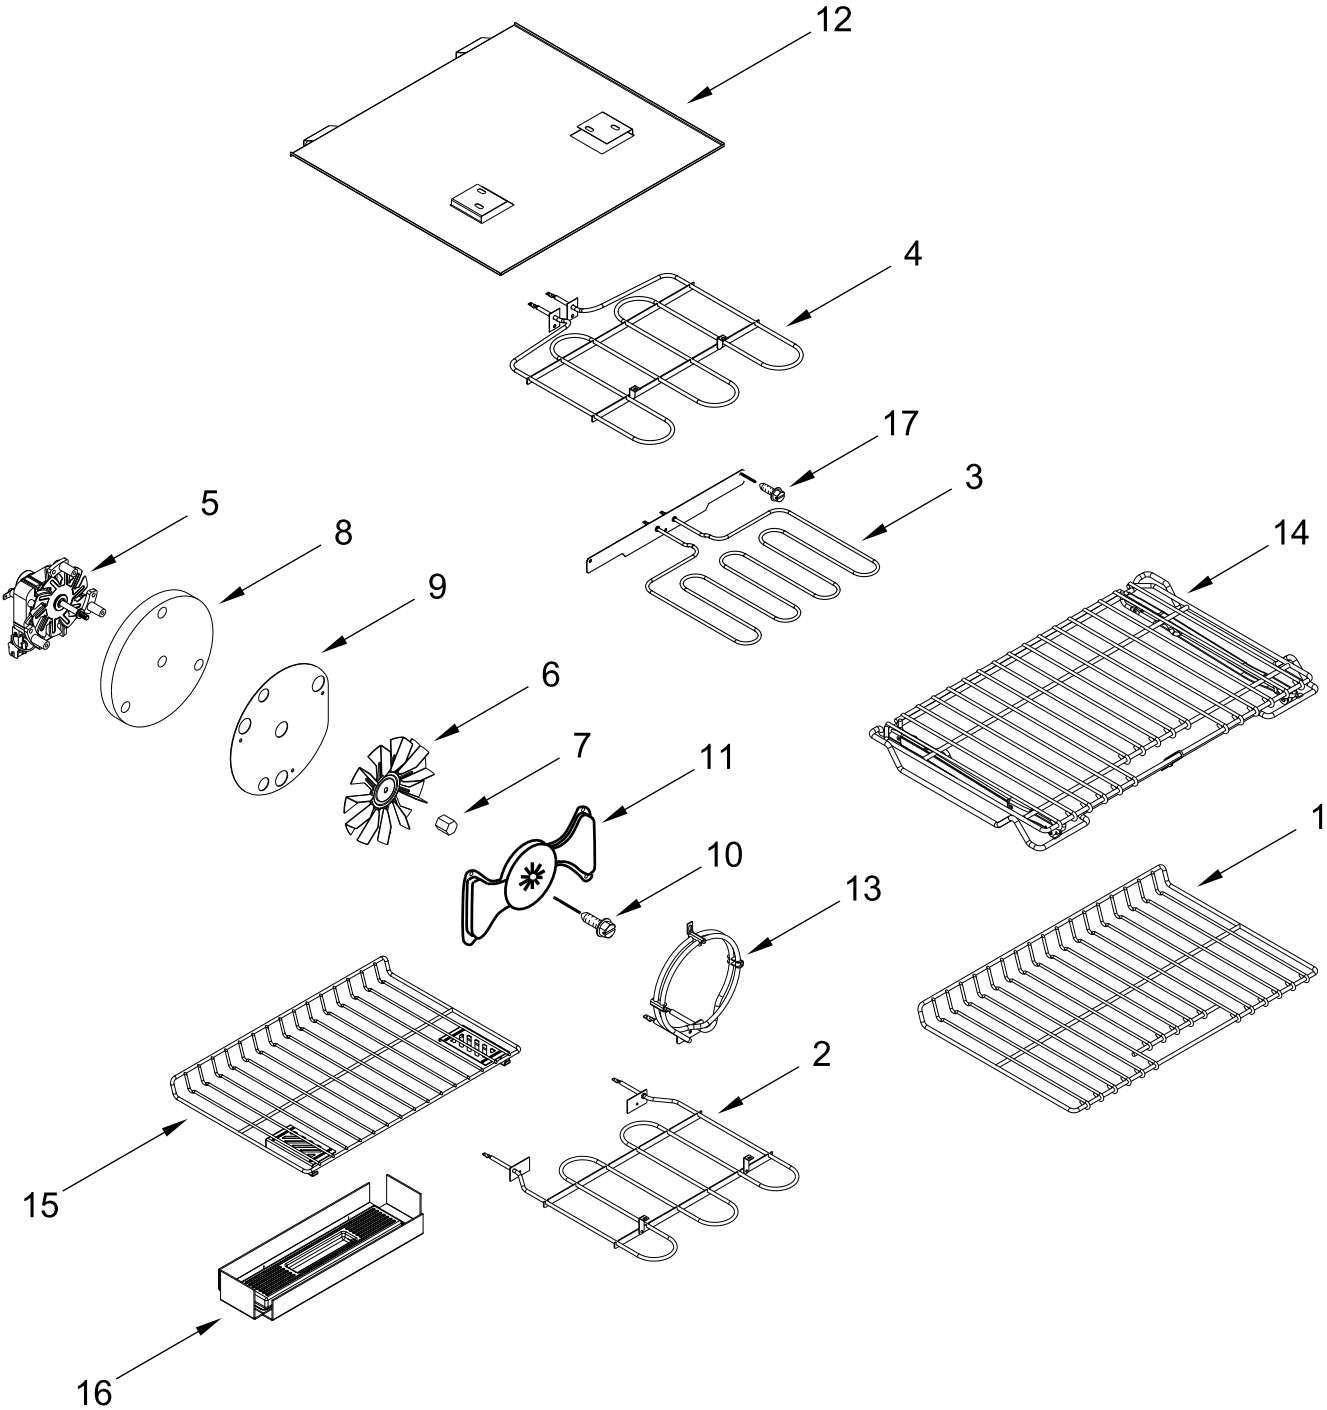




# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10570887	Rack, Oven	7	W10631504	Nut, Acorn (LH)	14	W10570870	Rack, Oven (Telescoping)
2	W10249979	Element, Broil (Lower)	8	W10274268	Insulation, Convection Motor	15	W10685968	Rack, Steam
3	W10249981	Element, Bake (Upper & Lower)	9	W10339476	Plate, Insulation	16	W10686408	Kit, Reservoir (Steam Rack)
4	W10317476	Element, Broil (Upper)	10	W10720084	Screw	17	7101P426-60	Screw
5	W11190725	Motor, Convection	11	8303962BU	Cover, Fan			
6	W10631503	Blade, Fan	12	W10319762	Shield, Broil			
			13	W10271639	Element, Convection (240VAC)			


# UPPER DOOR PARTS

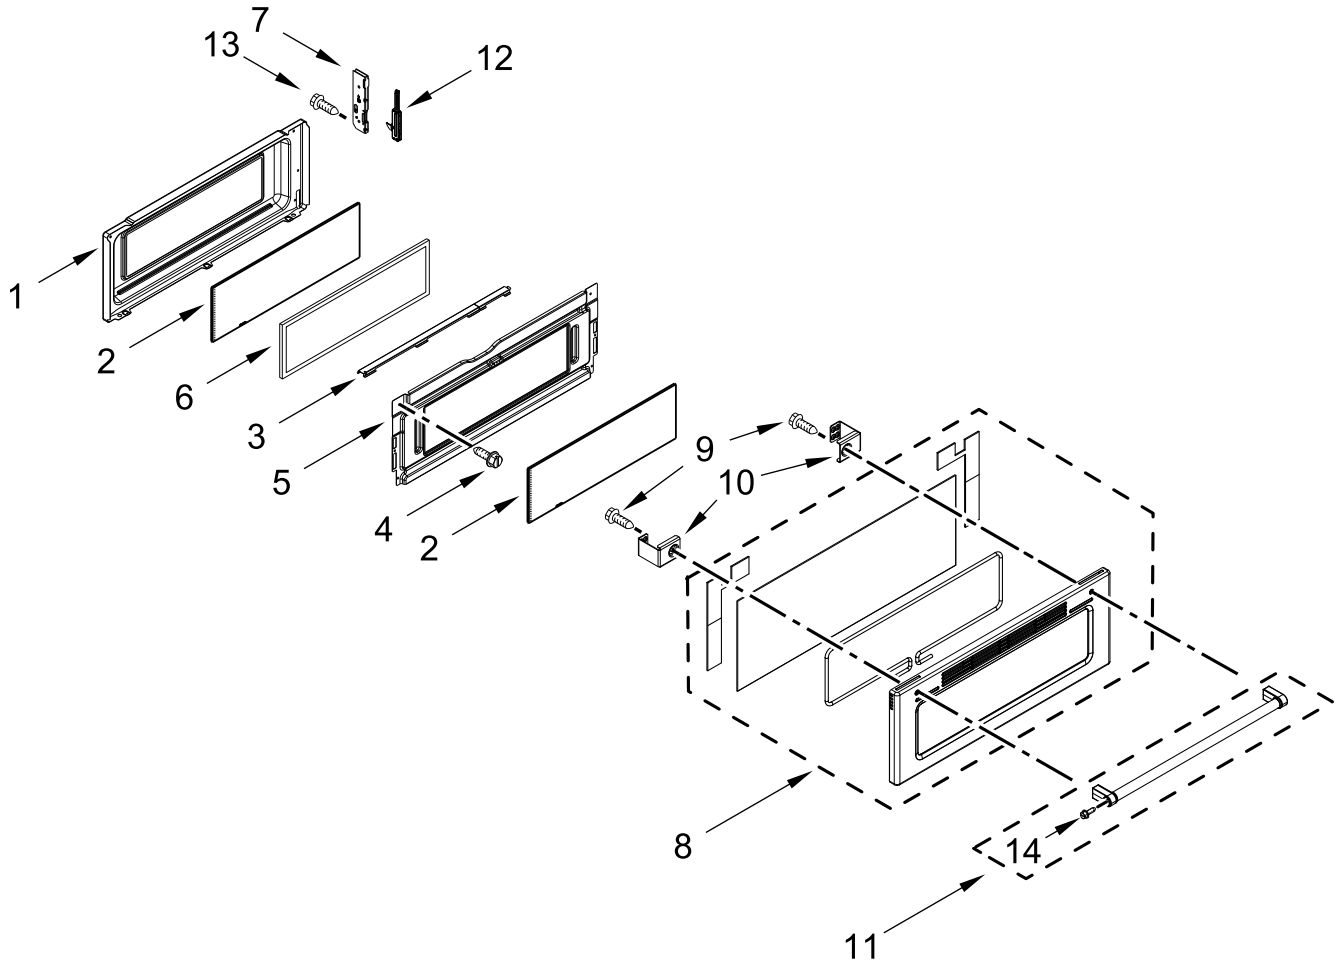

# UPPER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11051041	Lining, Door	8		Assembly, Door	12	W10485733	Hinge, Door (Left)
2	W11099272	Glass, Inner		W10645192	Stainless		W10485732	Hinge, Door (Right)
3	W10272708	Frame, Glass	9	W10480830	Screw	13	W10031780	Screw
4	W10292297	Screw	10	W10645182	Bracket, Door Handle	14	W10656499	Screw
5	W10485723	Retainer, Insulation	11		Assembly, Door Handle			
6	W10321271	Insulation, Door		W10674701	Stainless			
7	W10289077	Receiver, Hinge						

# LOWER DOOR PARTS

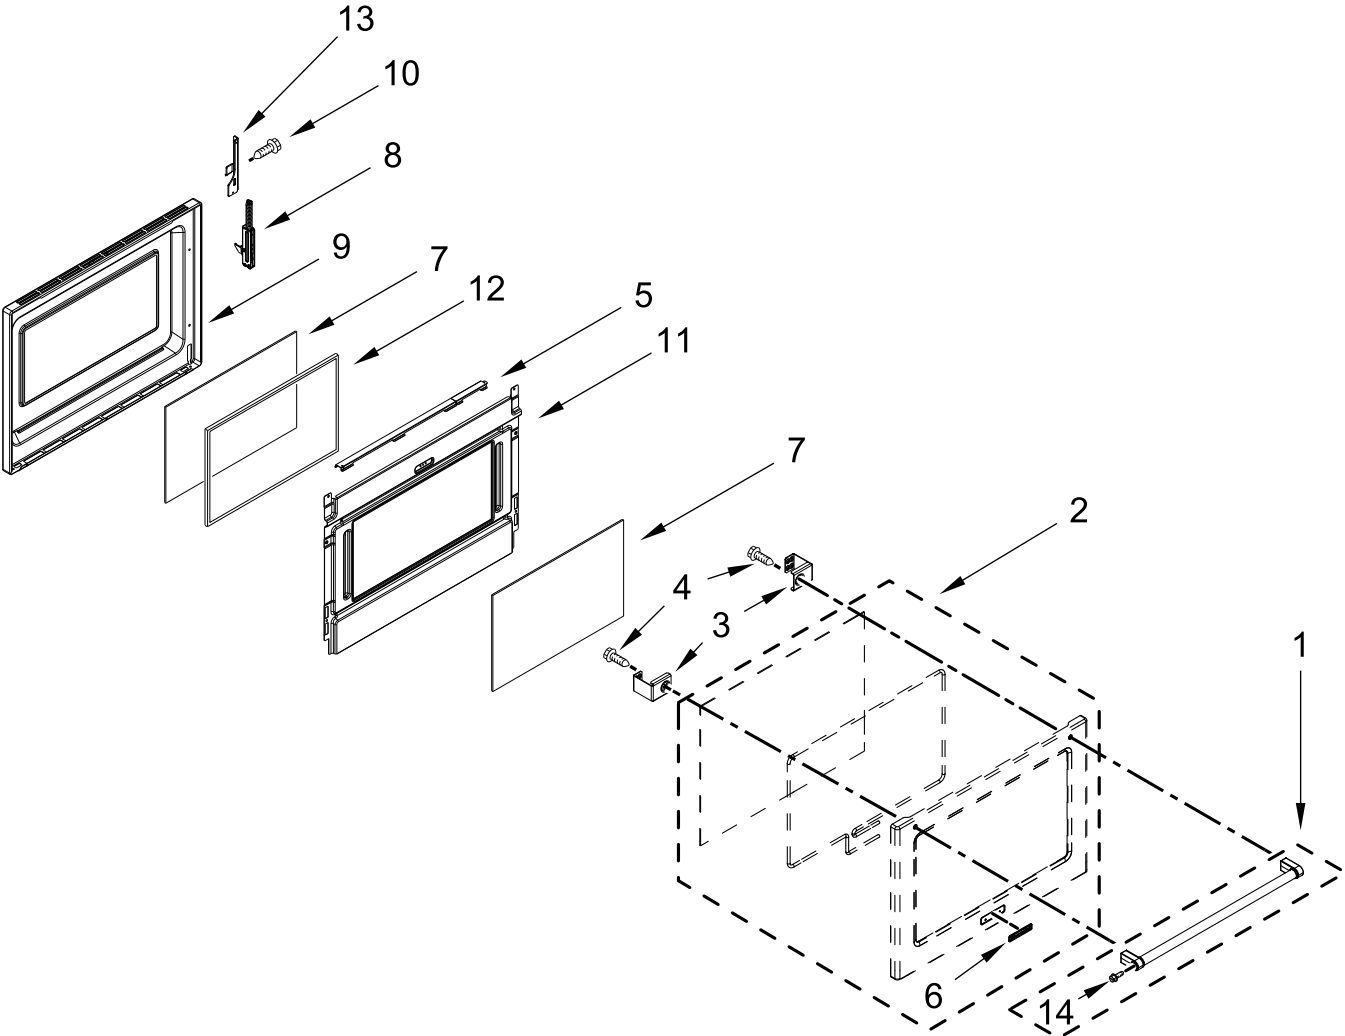

# LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Door Handle	5	W10272594	Frame, Glass	11	W10340464	Retainer, Insulation
	W10674701	Stainless	6	W10518672	Badge	12	W10321285	Insulation, Door
2		Assembly, Door	7	9757706	Glass, Inner	13	W10272329	Receiver (Left)
	W10645181	Stainless	8	W10335434	Hinge, Door (Left)		W10272328	Receiver (Right)
3	W10645182	Bracket, Door Handle		W10335433	Hinge, Door (Right)	14	W10656499	Screw
4	W10480830	Screw	9	W10292008	Lining, Door			
			10	4449040	Screw			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		PAINT, TOUCH-UP (1/2oz.)
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
		PAINT, SPRAY
	350930	White
	285006	Black
	4392901	Biscuit/Bisque
	350956	Almond
	350938	Gray Primer
	350942	White Primer
		PAINT, BULK (1 qt.)
	799344	White (Uncut)
		ACCESSORIES
	W10355016	Cleaner, Stainless Steel
	31605	Kit, Cooktop Care
	W10355051	Cleaner, Cooktop
	W10391473	Pad, Cooktop Cleaning
	31463A	Protectant, Cooktop
	WA906B	Scraper, Cooktop
	W10123240	Rack, Broiler Pan & Roasting